



SIM ONLY - PHONE SETUP

MI-LINK DATA EXTENDER

ALL PHONE SETTINGS MUST BE SET AS PER MANUAL'S SPECIFICATIONS FOR OPTIMUM RESULTS.

DUAL SIM PHONES – MTN SIM MUST BE IN SLOT ONE




PHONE SETTINGS


- BACKGROUND DATA USAGE
- DATA SAVER
- BATTERY OPTIMIZATION
- ADAPTIVE POWER SAVING
- DATA ROAMING / MOBILE DATA
- SIGNAL STRENGTH

- ON
- OFF
- OFF (or Mi-Link app settings OFF)
- OFF
- ON
- BELOW 100


BACKGROUND DATA USAGE

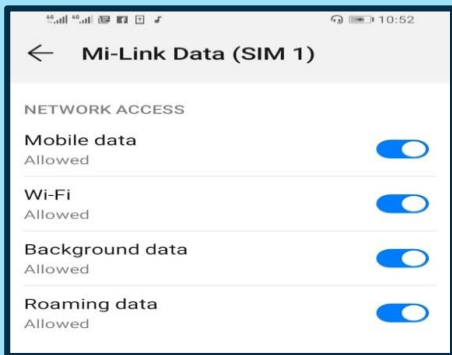

If user prefers to keep phone DATA SAVER ON, please make sure the settings on **Mi-Link Data App is set to "allow app while data saver is on – ON"*

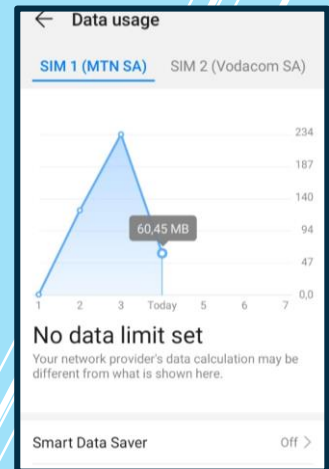


BATTERY OPTIMIZATION

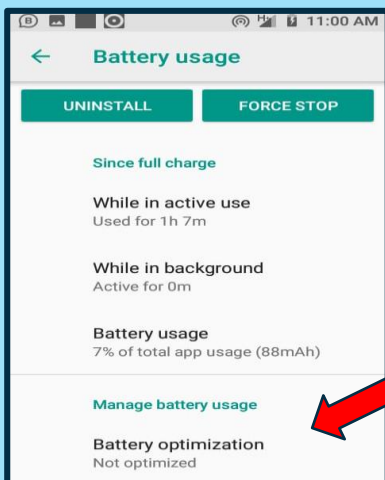

Find phone "SETTINGS"
Open "MI-LINK DATA APP"
Open "BATTERY SETTINGS"
In the MI-LINK DATA APP




BOTH SETTINGS

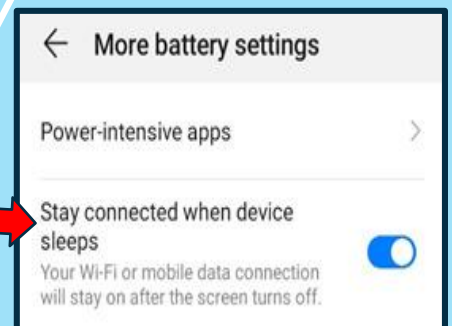

Please note that phone settings may differ from model or make as per illustrations and user must search his/her own phone settings.

ADAPTIVE POWER SETTINGS

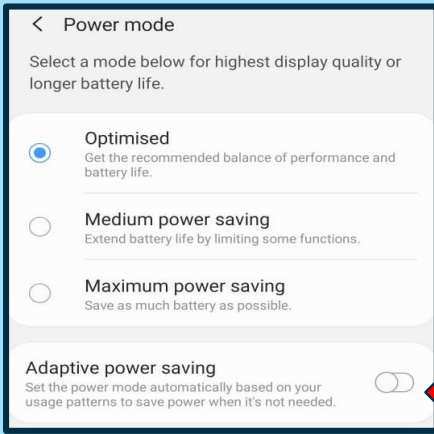


“Adaptive power saving” must be **OFF**

Some phones may not have this option
If not, then user can ignore

Please note that phone settings may differ from model or make as per illustrations and user must search his/her own phone settings.

DATA ROAMING / MOBILE DATA

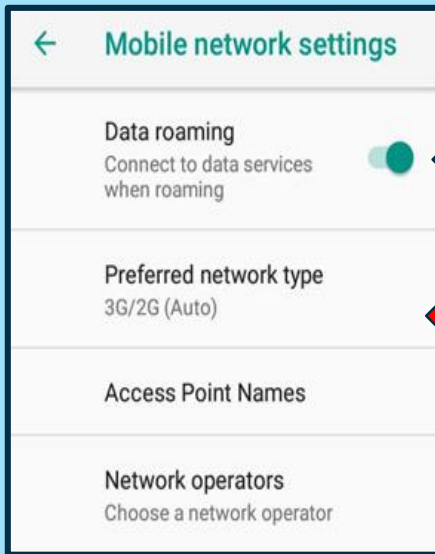


Data roaming – **ON**


Preferred Network - **AUTO**

Please note that phone settings may differ from model or make as per illustrations and user must search his/her own phone settings.

SIGNAL STRENGTH TESTING

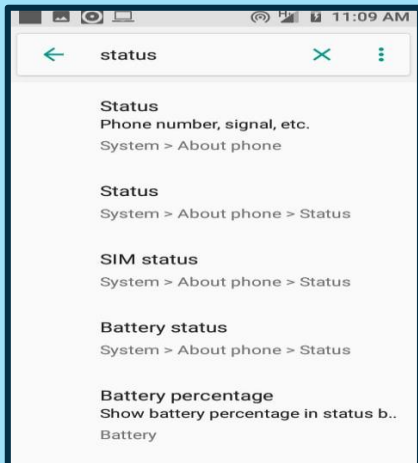

Sim signal strength should **NOT** be **MINUS 100 or less**
Go to “SETTINGS”
Enter “STATUS” INTO SEARCH BAR.
Choose “PHONE NUMBER, SIGNAL, NETWORK”

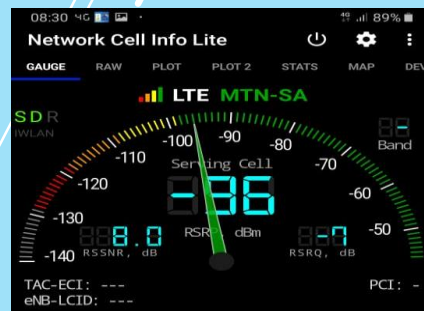

Please note that phone settings may differ from model or make as per illustrations and user must search his/her own phone settings.